

Islandix Wheel Analytics

USB Quickstart Manual



<https://www.islandix.com/support>

support@islandix.com

Document revision № 2451

Quick start – USB

This page contains minimal instructions for connecting Wheel Analytics USB. To connect wirelessly, read the [Wireless Quickstart manual](#) instead. For detailed instructions on applications and configuration, please see [the manual](#).

To connect using USB:

1. Connect Wheel Analytics to a computer using the included USB cable.
2. Wait 60 seconds for the tool to initialize and create the USB connection.
3. On the computer navigate to *http://192.168.3.1/* using your preferred browser.

The tool is now fully operational and ready to use. As an alternative to remembering the IP address in step 3 above, Wheel Analytics can be addressed by name. Try:

Standard	Default address	Client compatibility
Zeroconf	http://truingstand.local/	Apple Mac OS, Apple iOS, Linux, other platforms
LLMNR	http://truingstand/	Microsoft Windows, Linux, other platforms



Some browsers may incorrectly interpret a peer-to-peer address as a search query. To avoid this problem enter the complete address starting with *http://...*

For additional information and troubleshooting help, please see [the full manual](#).