

Islandix Wheel Analytics

USB Quickstart Manual



<https://www.islandix.com/support>

support@islandix.com

Document revision № 2372

Quick start – USB

This page contains minimal instructions for connecting Wheel Analytics using USB. To connect wirelessly, read the wireless quick start page instead. For detailed instructions on applications and configuration and everything else, please see [the manual](#).

To connect using USB:

1. Connect Wheel Analytics to a computer using the included USB cable.
2. Wait 60 seconds for the tool to initialize and create the USB connection.
3. On the computer navigate to *http://192.168.3.1/* using your preferred browser.

The tool is now fully operational and ready to use. As an alternative to remembering the IP address in step 3 above, Wheel Analytics can be addressed by name. Try:

Standard	Default address	Client compatibility
Zeroconf	http://truingstand.local/	Apple Mac OS, Apple iOS, Linux, other platforms
LLMNR	http://truingstand/	Microsoft Windows, Linux, other platforms



Some browsers may incorrectly interpret a peer-to-peer address as a search query. To avoid this problem enter the complete address starting with *http://...*